

# Care and maintenance for ziptrak blinds

What is unique about the ZIPTRAK® BLIND SYSTEM and sets it apart from any other are its specially designed **slotted side tracks** between which the blind glides smoothly and easily up or down and stops at whatever position you require.

To PROTECT your Verandah or Patio from WIND and RAIN - while enjoying the view - you may use CLEAR or TINTED Quality PVC and or MESH products for added privacy.

## CLEANING

Gently hose down to remove any dust. Clean with a dilute solution of mild soap only and warm water. Take care not to rub dirt or grit into surface. Scratching will result. Rinse and dry with a soft cloth. For a really good finish polish with "ViewPlex". Follow the instructions on the can. Don't use chemicals clean regularly to prevent grit build up.

## MOWING

Always roll up the blind before mowing or trimming nearby.

## STORMS

These blinds are not designed to withstand storms. Always roll up the blind in strong winds, or when you won't be home for extended periods.

## DO NOT LEAVE ROLLED UP FOR LONG PERIODS

The longer it is rolled up the longer it will take for the wrinkles to come out.

## DO NOT LEAVE ROLLED UP IN DIRECT SUNLIGHT

Heat can build up inside the roll damaging the PVC.

## AVOID ROLLING UP WHILST WET

PVC can absorb water which can show up as cloudy residue. This will eventually disappear if the blind is left unrolled in the sun.

## DO NOT ROLL OUTWARDS

Dirt and moisture can build up in the roll staining the PVC

## FLAMMABLE

Keep hot surfaces and flames away.

## Using a gearbox driven Ziptrak blind



Always insure locking pin (opposite end to gearbox) is secure before operation.



Hook the crank handle through the arm of the gearbox and turn it until the blind has reached desired height.



This system can be stopped at any height.

When dropping the blind to the ground you can add tension by inserting the locking pins provided, and reversing the gearbox just **slightly** to take any movement out of the blind. The pins are long enough to hold the plastic guide secure while not protruding the blind.



Wind pressure may cause the blinds decent to be unsmooth. A helping hand may be required.